
sphinxcontrib-eagle Documentation

Release 0.0.7

ponty

March 11, 2012

CONTENTS

1	About	2
2	Basic usage	3
3	How it works	4
4	Installation	5
4.1	General	5
4.2	Ubuntu	5
4.3	Uninstall	5
5	Usage	6
5.1	Configuration	6
5.2	Directives	6
5.3	Common options	8
5.4	Image options	8
5.5	Image3D options	12
5.6	Partlist options	18

sphinxcontrib-eagle

Date March 11, 2012

PDF sphinxcontrib-eagle.pdf

ABOUT

This `Sphinx` 1.0 extension exports `eagle` partlist or image (2D/3D) of schematic or board during the build step and includes them into the documentation.

Links:

- home: <https://github.com/ponty/sphinxcontrib-eagle>
- documentation: <http://ponty.github.com/sphinxcontrib-eagle>

Features:

- `eagexp` is used for processing

BASIC USAGE

```
.. eagle-image:: singlesided.sch
   :resolution: 100
   :scale: 30 %

.. eagle-image3d:: singlesided.brd

.. eagle-partlist:: singlesided.sch
   :header: part, value
```

HOW IT WORKS

1. export image or text by `eagle` using `eagexp`
2. include image or text into documentation

INSTALLATION

4.1 General

- install eagle
- install povray (optional for 3D)
- install pip
- install pyvirtualdisplay , xvfb , xephyr (optional for background processing)
- install the program:

```
# as root
pip install sphinxcontrib-eagle
```

4.2 Ubuntu

```
sudo apt-get install eagle
sudo apt-get install povray
sudo apt-get install python-pip

# optional for background processing
sudo apt-get install xvfb xserver-xephyr

sudo pip install sphinxcontrib-eagle
```

4.3 Uninstall

```
# as root
pip uninstall sphinxcontrib-eagle
```


USAGE

5.1 Configuration

Add `sphinxcontrib.eagle` to extensions list in `conf.py`:


```
extensions = [  
    'sphinxcontrib.eagle',  
]
```

5.2 Directives

There are 3 directives, they accept a single string as argument, which is the path to the eagle `.sch` or `.brd` file. 3D is available only for board:

```
.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.brd  
.. eagle-image3d:: ~/.eagle/projects/examples/tutorial/demo2.brd  
.. eagle-partlist:: ~/.eagle/projects/examples/tutorial/demo2.brd
```

The above snippet would render like this:

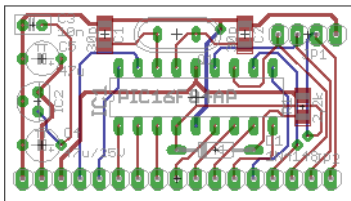

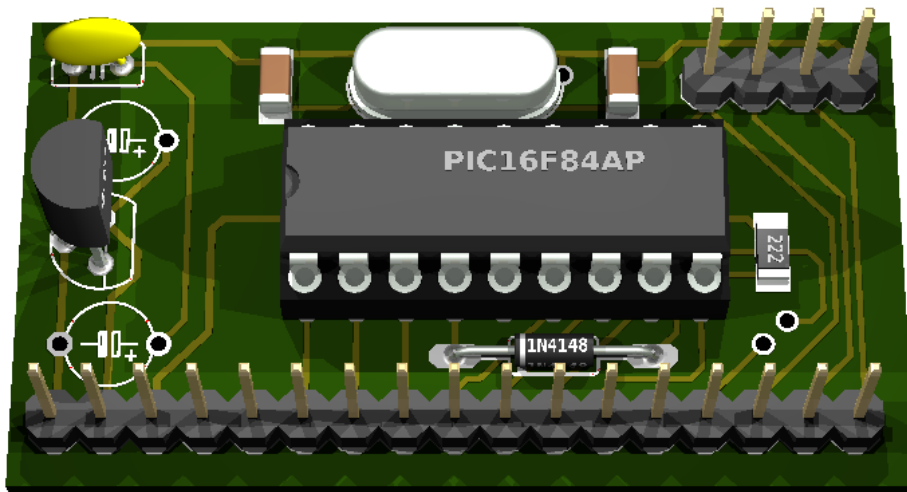


Table 5.1:

part	value	package	library	position	orientation
C1	30p	C1206	rcl	(0.5 0.85)	R270
C2	30p	C1206	rcl	(1.225 0.85)	R270
C3	10n	C025-025X050	rcl	(0.125 0.9)	R180
C4	47u/25V	TAP5-45	rcl	(0.175 0.275)	R180
C5	47u	TAP5-45	rcl	(0.175 0.725)	R180
D1	1N4148	DO35-10	diode	(1.075 0.25)	R0
IC1	PIC16F84AP	DIL18	microchip	(0.975 0.525)	R0
IC2	78L05Z	TO92	linear	(0.15 0.5)	R90
JP1	PROG	1X04	PINHEAD	(1.55 0.85)	R0
JP2	APPL	1X17	PINHEAD	(0.875 0.1)	R180
Q1		QS	special	(0.875 0.85)	R180
R1	2,2k	R1206	rcl	(1.525 0.475)	R270

The same for schematic without 3D:

```
.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.sch
   :scale: 30%

.. eagle-partlist:: ~/.eagle/projects/examples/tutorial/demo2.sch
```

The above snippet would render like this:

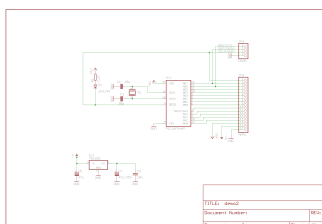


Table 5.2:

part	value	device	package	library	sheet
C1	30p	C-EUC1206	C1206	rcl	1
C2	30p	C-EUC1206	C1206	rcl	1
C3	10n	C-EU025-025X050	C025-025X050	rcl	1
C4	47u/25V	CPOL-EUTAP5-45	TAP5-45	rcl	1
C5	47u	CPOL-EUTAP5-45	TAP5-45	rcl	1
D1	1N4148	1N4148	DO35-10	diode	1
IC1	PIC16F84AP	PIC16F84AP	DIL18	microchip	1
IC2	78L05Z	78L05Z	TO92	linear	1
JP1	PROG	PINHD-1X4	1X04	pinhead	1
JP2	APPL	PINHD-1X17	1X17	pinhead	1
Q1		XTAL/S	QS	special	1
R1	2,2k	R-EU_R1206	R1206	rcl	1

5.3 Common options

5.3.1 timeout

Using the option `timeout` you can set the timeout (default 20) in seconds for processing. Eagle can block the export by displaying a messagebox. If this happens the export is aborted after timeout:

```
.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :timeout: 60
```

5.4 Image options

5.4.1 resolution


Using the option `resolution` you can set the resolution in dpi, valid range: 50..2400, default is 150:


```
.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :resolution: 50

.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :resolution: 100

.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :resolution: 200
```

The above snippet would render like this:

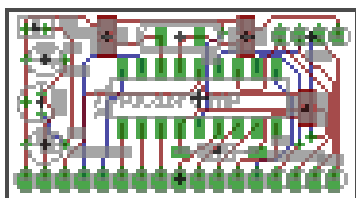

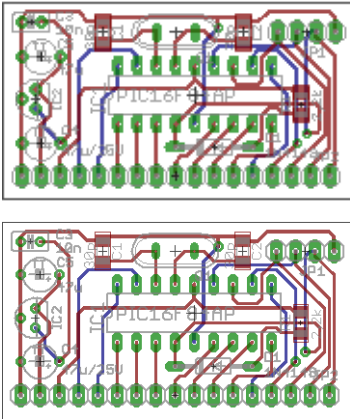

5.4.2 palette

Using the option `palette` you can set the background color.

Valid settings:

- white
- black
- colored

Default:white


Example:


```
.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.sch
   :palette:  white
   :scale: 30 %

.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.sch
   :palette:  black
   :scale: 30 %

.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.sch
   :palette:  colored
   :scale: 30 %
```

The above snippet would render like this:

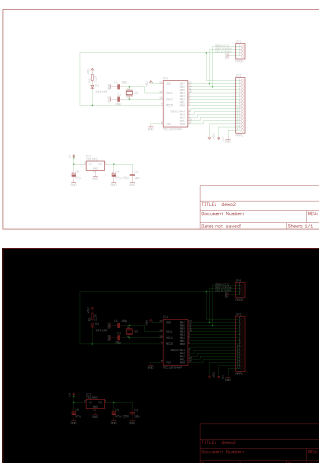

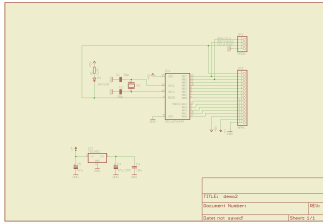


5.4.3 layers

Using the option `layers` you can display or hide layers. Check eagle documentation for valid settings.

Example:

```
.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :layers: via,pads
```

The above snippet would render like this:

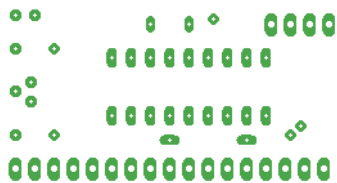


5.4.4 mirror

Using the option `mirror` you can mirror the image.

Example:

```
.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :mirror:
```

The above snippet would render like this:

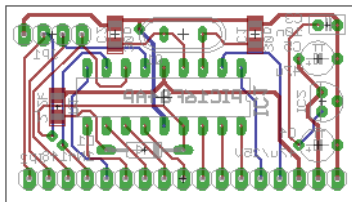

5.4.5 command

Using the option `command` you can apply eagle commands.

Example:

```
.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :command: display none dimension
```

The above snippet would render like this:




5.4.6 scale, alt

Example:

```
.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.sch
   :scale: 20 %
   :alt: alternate text

.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :scale: 20 %
   :alt: alternate text
```

The above snippet would render like this:

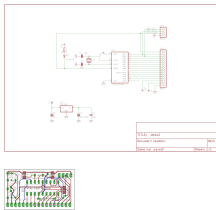


5.4.7 height, width

Example:

```
.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :height: 100px
   :width: 100 px
```

The above snippet would render like this:

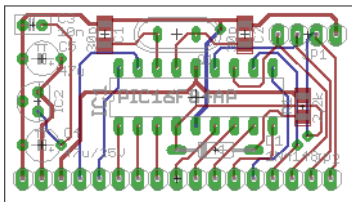


5.4.8 align

Example:

```
.. eagle-image:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :height: 100px
   :width: 100 px
   :align: right
```

The above snippet would render like this:

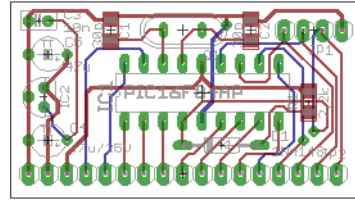

5.5 Image3D options

5.5.1 size

Size of image, width x height:

```
.. eagle-image3d:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :size: 80x60

.. eagle-image3d:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :size: 400x300



.. eagle-image3d:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :size: 400x100



.. eagle-image3d:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :size: 100x400

.. eagle-image3d:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :size: 1600x1200
   :scale: 30%
```

The above snippet would render like this:



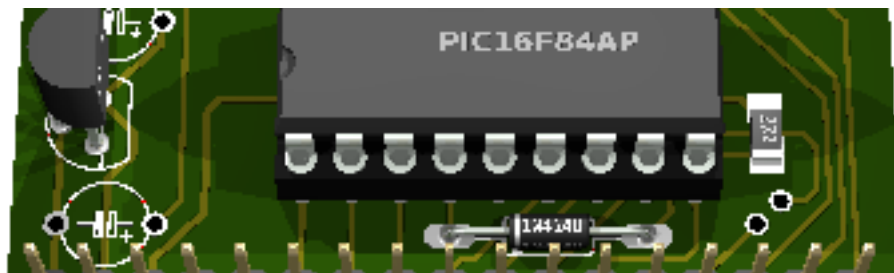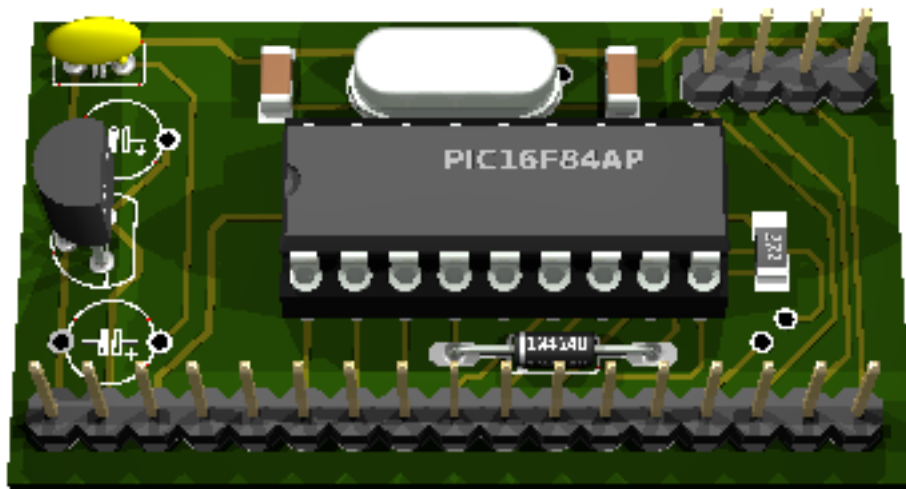

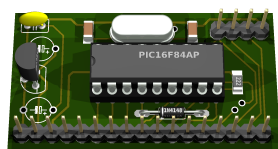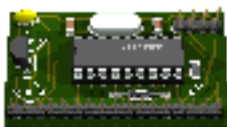

5.5.2 pcbrotate

Rotate PCB around x,y,z:

```
.. eagle-image3d:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :pcbrotate: 90,0,0

.. eagle-image3d:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :pcbrotate: 0,90,0



.. eagle-image3d:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :pcbrotate: 0,0,90



.. eagle-image3d:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :pcbrotate: 180,0,0
```



```
.. eagle-image3d:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :pcbrotate: 0,180,0

.. eagle-image3d:: ~/.eagle/projects/examples/tutorial/demo2.brd
   :pcbrotate: 0,0,180
```

The above snippet would render like this:

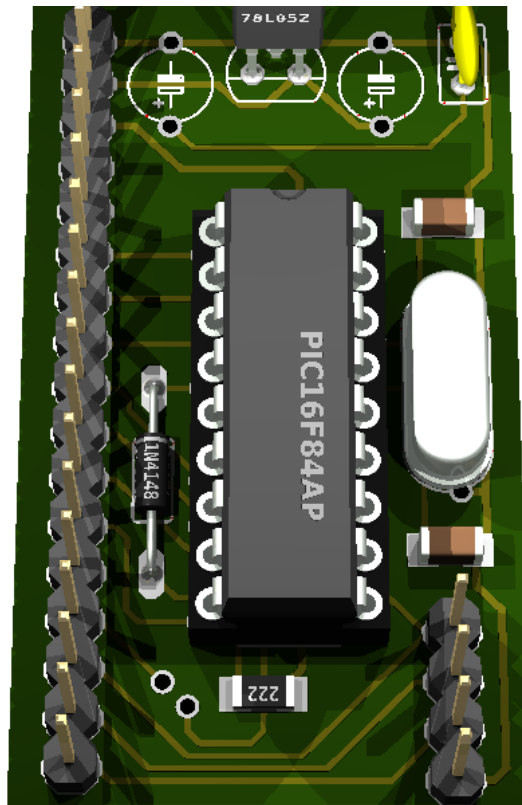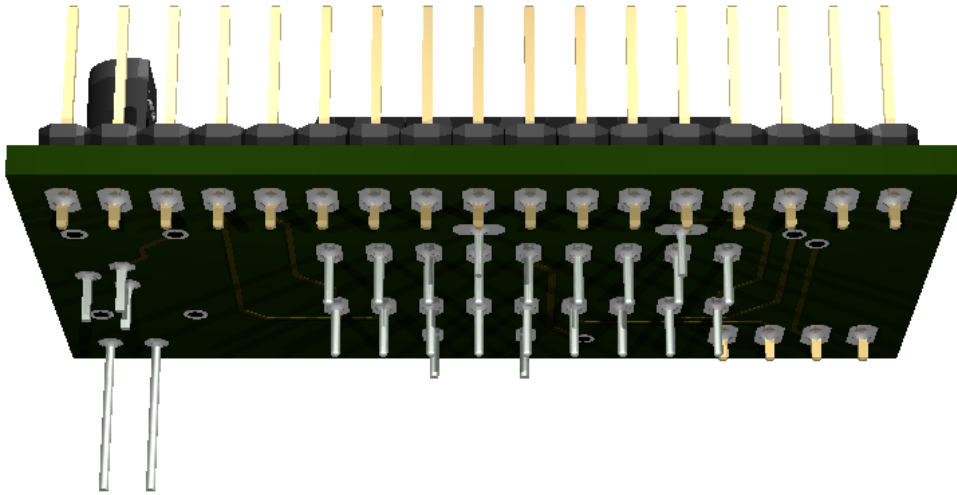

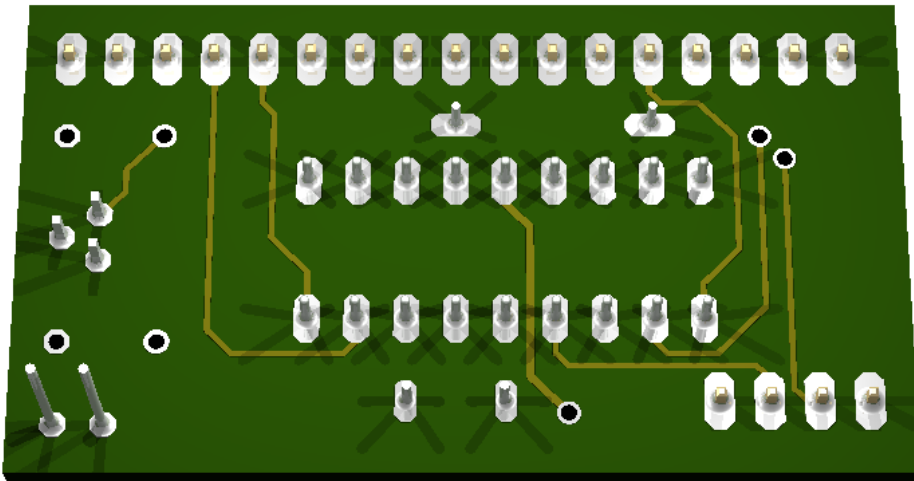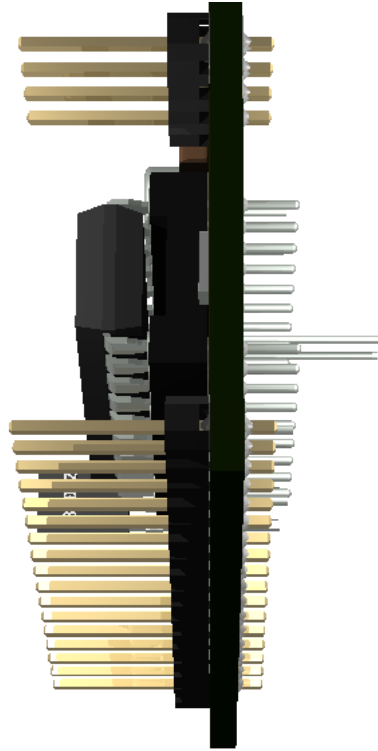

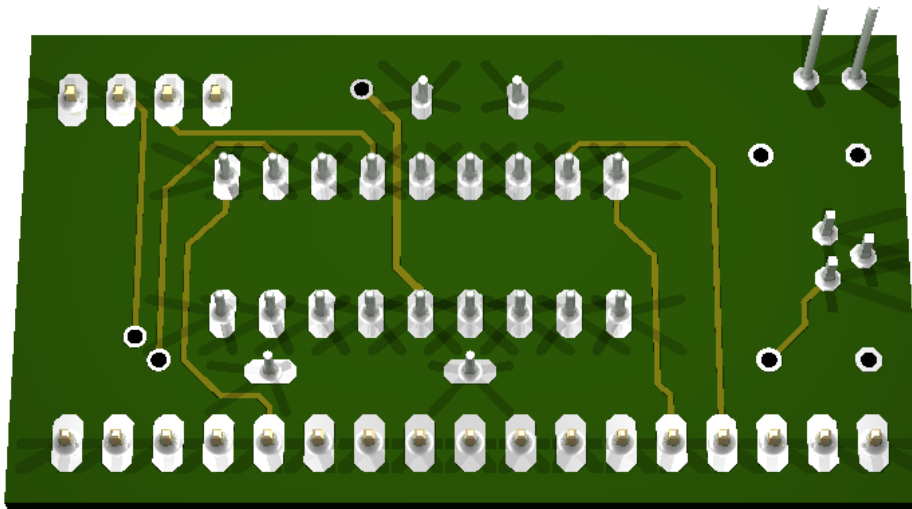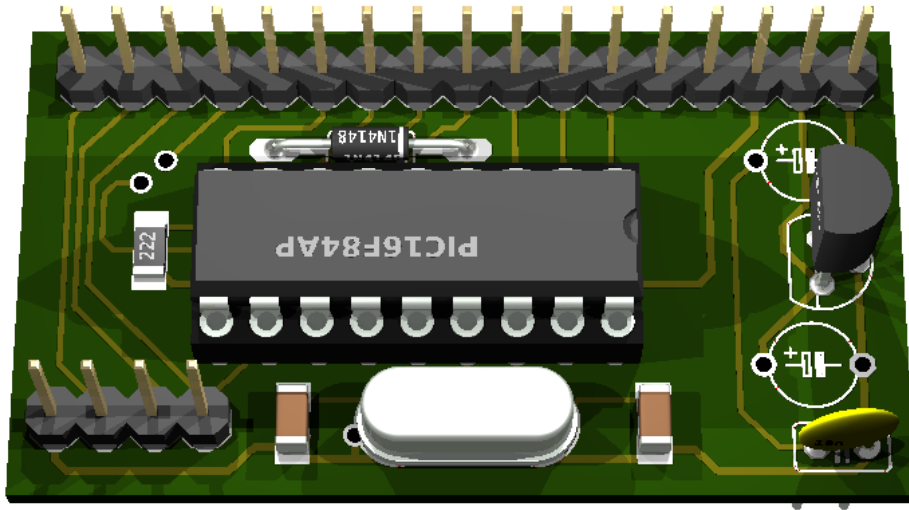

5.6 Partlist options

5.6.1 raw

Eagle partlist export is included as literal text:

```
.. eagle-partlist:: ~/.eagle/projects/examples/tutorial/demo2.sch
   :raw:
```

The above snippet would render like this:

```
Partlist

Exported from demo2.sch at 3/11/12 3:56 PM

EAGLE Version 5.11.0 Copyright (c) 1988-2010 CadSoft

Part      Value      Device      Package      Library      Sheet
-----
C1        30p        C-EUC1206   C1206        rcl          1
C2        30p        C-EUC1206   C1206        rcl          1
C3        10n        C-EU025-025X050 C025-025X050 rcl          1
C4        47u/25V    CPOL-EUTAP5-45 TAP5-45      rcl          1
C5        47u        CPOL-EUTAP5-45 TAP5-45      rcl          1
D1        1N4148     1N4148      DO35-10      diode        1
IC1       PIC16F84AP PIC16F84AP   DIL18        microchip    1
IC2       78L05Z     78L05Z      TO92         linear       1
JP1       PROG       PINHD-1X4   1X04         pinhead      1
JP2       APPL       PINHD-1X17  1X17         pinhead      1
Q1        XTAL/S     XTAL/S      QS           special      1
R1        2,2k      R-EU_R1206  R1206        rcl          1
```

5.6.2 header

A comma-separated list of selected column names:

```
.. eagle-partlist:: ~/.eagle/projects/examples/tutorial/demo2.sch
   :header: part, value
```

The above snippet would render like this:

Table 5.3:

part	value
C1	30p
C2	30p
C3	10n
C4	47u/25V
C5	47u
D1	1N4148
IC1	PIC16F84AP
IC2	78L05Z
JP1	PROG
JP2	APPL
Q1	
R1	2,2k

5.6.3 widths

A comma- or space-separated list of relative column widths. The default is equal-width columns:

```
.. eagle-partlist:: ~/.eagle/projects/examples/tutorial/demo2.sch
   :header: part, value
   :widths: 2,8
```

The above snippet would render like this:

Table 5.4:

part	value
C1	30p
C2	30p
C3	10n
C4	47u/25V
C5	47u
D1	1N4148
IC1	PIC16F84AP
IC2	78L05Z
JP1	PROG
JP2	APPL
Q1	
R1	2,2k